## LASER®

## Anti-Zap Protector 12V

The Anti-Zap Protector 12 volt protects vehicle electronics while welding or jump starting.



## **Additional Information**

- Prevents damage to electrical systems from voltage spikes during welding or jump starting.
- · For use on 12 volt systems. Polarity protected reverse connection warning.
- Designed to be fitted accross the battery terminals to absorb unwanted power surges.
- LED indicators: Green light on = protection; Red light on = no protection. With no protection, an alarm will also sound.
- · CE, UKCA & RoHS compliant.

http://lasertools.co.uk/product/7827

Video available: https://youtu.be/aZB5YJhFg6k















